



INSTALLATION INSTRUCTIONS

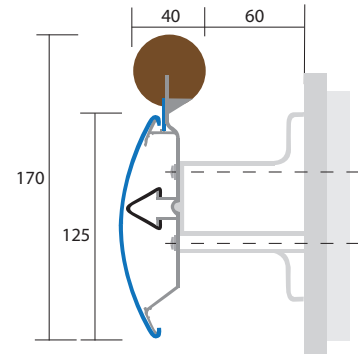

dF HRW170

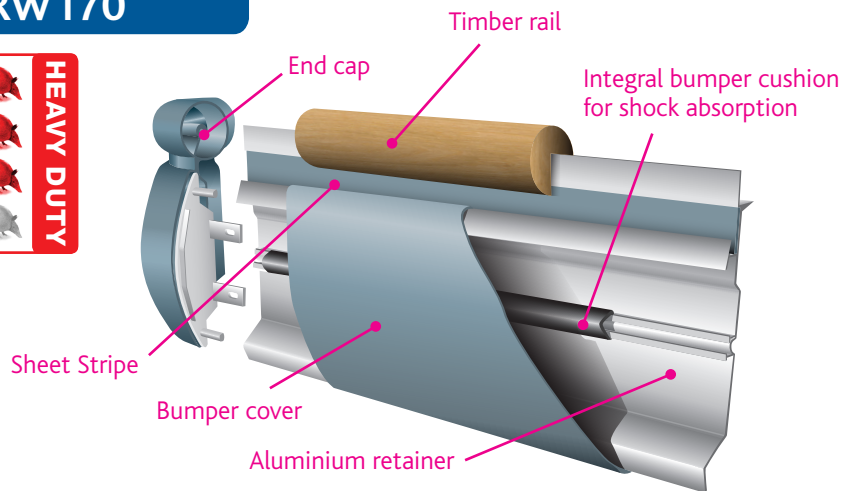


1



Cut the aluminium retainer to length remembering to allow for the width of the end caps.

2

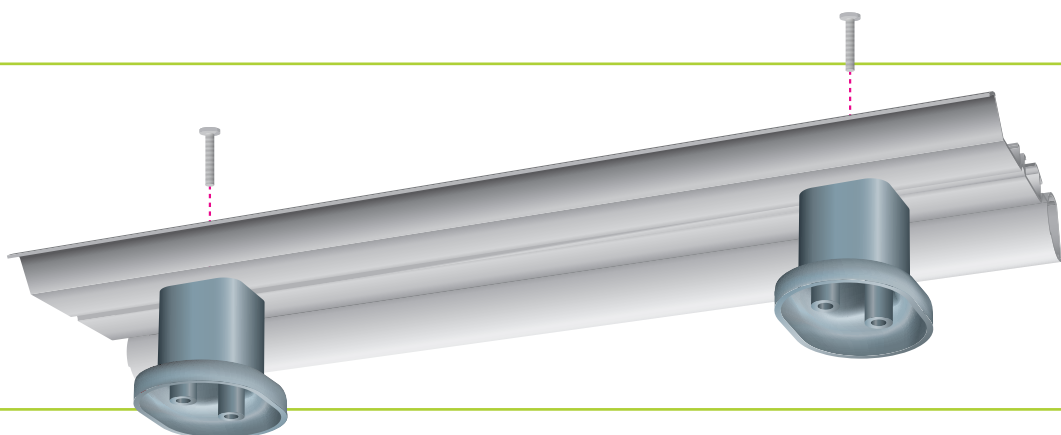

Fix the mounting brackets to the aluminium retainer using short self-drill screws. Begin 100mm from either end with maximum 800mm centres thereafter.

CONTINUED >>>



Protecting against life's little knocks

SDS Protection Limited | Wyck Crossroads | Binsted Road | ALTON HANTS | GU34 4NT
T: 01420 543222 | F: 01420 543355 | sales@sdsprotection.co.uk | www.sdsprotection.co.uk

Company Registration No. 04187742 VAT Registraion No. 212 1628 11 ISO 9001Registered Firm CHAS Accredited

3




Insert impact bumper cushion, sheet stripe, and corner endcaps onto aluminium retainer...

4



...and secure with screws.

5

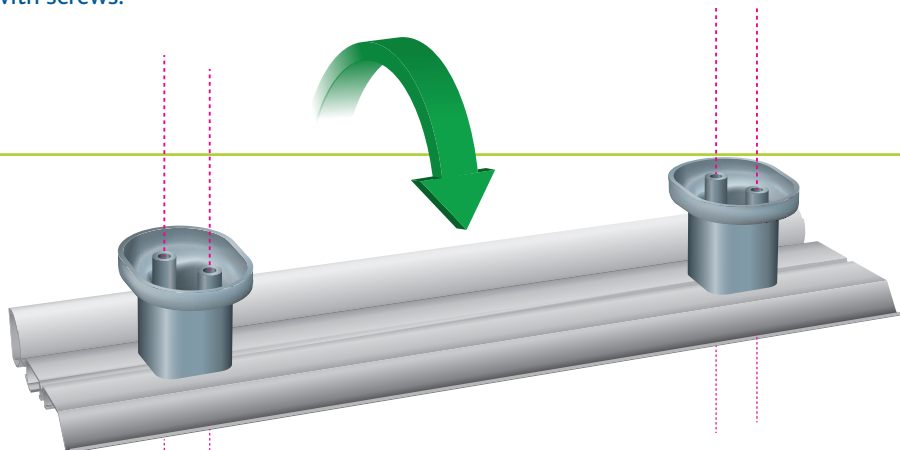

Using a 7mm drill bit, drill holes through the aluminium retainer from the back using the attached mounting brackets as guides.

CONTINUED >>>



Protecting against life's little knocks

SDS Protection Limited | Wyck Crossroads | Binsted Road | ALTON HANTS | GU34 4NT
T: 01420 543222 | F: 01420 543355 | sales@sdsprotection.co.uk | www.sdsprotection.co.uk


Company Registration No. 04187742 VAT Registraion No. 212 1628 11 ISO 9001Registered Firm CHAS Accredited

INSTALLATION INSTRUCTIONS

df HR170




6

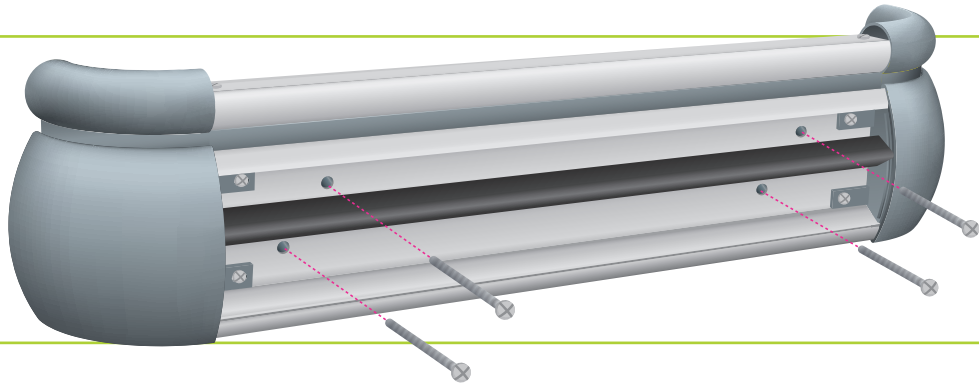

Hold the rail at the required height and fix to wall using plugs and screws.

7

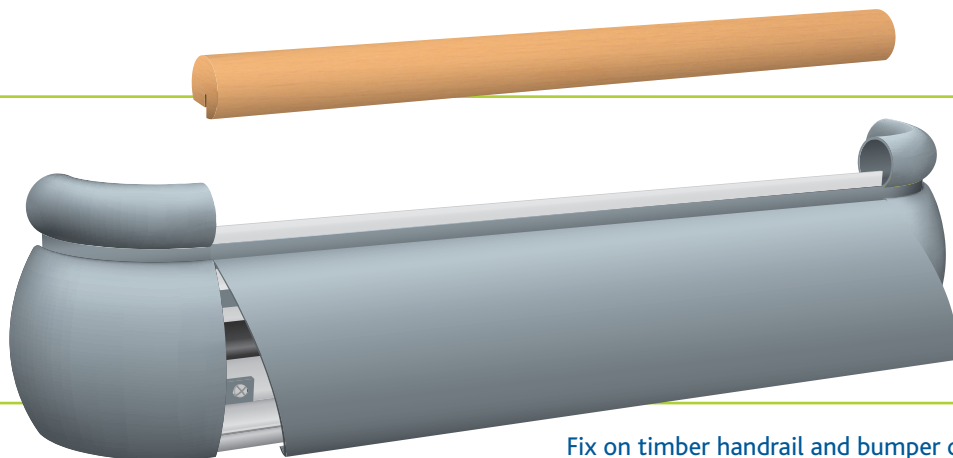

Fix on timber handrail and bumper cover.

8



Clean finished dfend HRW170 profile with wood polish and SDS Protection Durablend approved cleaner.



Protecting against life's little knocks

SDS Protection Limited | Wyck Crossroads | Binsted Road | ALTON HANTS | GU34 4NT
T: 01420 543222 | F: 01420 543355 | sales@sdsprotection.co.uk | www.sdsprotection.co.uk

Company Registration No. 04187742 VAT Registraion No. 212 1628 11 ISO 9001Registered Firm CHAS Accredited